

FRS TWO WAY RADIO OWNER'S MANUAL



ATTENTION! The radio is a multitask FRS transceiver. Combining the latest technology in radio communication along with a sturdy mechanical frame, the radio is the ideal and effective solution for the professionals who need to stay in touch with the working team (in construction sites, buildings, shows, trade fairs or hotels) or for leisure users that just want to keep up with friends and family.

To help you ward off bodily injury or property loss that may arise from improper operation, please read all the information carefully before using our products.


Before operating the radio, please read all safety and operating instructions. Save all instructions in a safe place for future reference.



FCC Part 15.21 Warning Statement

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Radio Overview

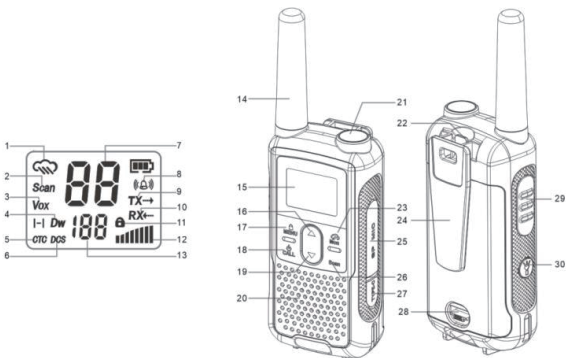

- | | |
|--------------------------------------|------------------------------|
| 1. NOAA Weather Band Indicator | 2. Scan Indicator |
| 3. VOX Indicator | 4. Dual Watch Indicator |
| 5. CTC Indicator | 6. DCS Indicator |
| 7. Channel Indicator | 8. Emergency Alert Indicator |
| 9. Transmit Status Indicator | 10. Receive Status Indicator |
| 11. Keypad Lock Indicator | 12. Volume level Indicator |
| 13. DCS / CTCSS Privacy Code Numbers | 14. Antenna |

- | | |
|-------------------------------|----------------------------------|
| 15. Backlit LCD Display | 16. UP Button |
| 17. Menu/Lock Button | 18. Power/Call Button |
| 19. DOWN Button | 20. Speaker |
| 21. Flashlight | 22. Belt Clip Lock Tab |
| 23. Weather/Monitor Button | 24. Belt clip |
| 25. Accessory Port | 26. Scan Button |
| 27. Type-C USB Charging Port | 28. Battery release latch |
| 29. PTT (Push-To-Talk) Button | 30. Flashlight/ Emergency Button |

Main features

- 22 FRS Channels
- 12 NOAA Weather Channels
- 2 Channels Watch
- Channel Monitor
- 155 Privacy Codes (50 CTCSS codes/ 105 DCS codes)
- Hands-Free Operation (VOX)
- Roger Beep Tone
- Battery Level Meter
- Battery/Power Saver
- Low Battery Audible Alert
- 2pin Kenwood headset jack
- Li-Ion 1400mAh battery pack
- Output power: $\leq 2W$ (channels 1-7 and 15-22)
- NOAA Weather Scan
- Privacy Codes Scan and Store
- Channel Scan Function
- 10 Selectable Call Alerts
- Call Alert
- Keypad Lock
- Emergency Strobe Light
- Backlit LCD Display
- TOT (Time out timer)
- Type-C USB connector for charging
- Keystroke Tones
- Battery Life: up to 18 hours (under typical use conditions)

**Range may vary depending on environmental and/or topographical conditions.*

Installation of Accessories

1. Install the Li-ion Battery

Each radio operates with either a li-ion battery pack or optional 3 AA alkaline batteries. The belt clip should be removed (see below) to ease installation or removal of the batteries. To install the batteries:

- (1) Turn the radio off. With the back of the radio facing you, remove the belt clip (see diagram below) for easy access, then remove the Battery Cover by pressing down on the top center and sliding it down from the radio.
- (2) With the back of the radio facing you, lift the battery cover latch up and remove the cover.
- (3) Remove the li-ion battery pack from the clear plastic bag (do not disassemble or unwrap the battery pack).
- (4) Insert the li-ion battery pack with the diagram facing you. (Installing the batteries incorrectly will prevent the unit from operating or may damage the unit).
- (5) Close the battery cover. Replace the belt clip, making sure it locks into place.



Install three AA Ni-MH Batteries (rechargeable)

Warning: Ni-MH batteries are rechargeable batteries and cannot be mixed with alkaline batteries

- (1) Turn off the radio.
- (2) With the back of the radio facing you, lift up the battery cover latch, and then remove the battery cover.
- (3) As shown in the figure, insert three AA Ni-MH batteries with + and – polarity (wrong installation of the batteries will cause the unit to fail or damage the unit).
- (4) Close the battery cover, Replace the belt clip and make sure it locks in place.



Installing the Three AA Alkaline Batteries (non-rechargeable)

Warning: Alkaline batteries can only be used in emergency situations and cannot be charged. There is a danger of explosion when charging alkaline batteries

- (1) Turn the radio off.
- (2) With the back of the radio facing you, lift the battery cover latch up and remove the cover.
- (3) Insert the three AA Alkaline batteries with + and – polarity as shown inside (Installing the batteries incorrectly will prevent the unit from operating or may damage the unit).
- (4) Close the battery cover. Replace the belt clip, making sure it locks into place.

2. Installing the Belt Clip

To install the **Belt Clip**, slide the clip down into the slot on the back of the radio until the **Belt clip-latch** clicks. To remove the **Belt Clip**, press the Lock-tab down, and then gently pull the belt clip up toward the top of the radio.

3. External Speaker/Microphone Jack

Each radio can be used with an optional external speaker/microphone or headset, freeing your hands for other tasks. To use an optional speaker/microphone or headset:

- (1) Open the rubber cap on the side of the radio.
- (2) Insert the plug(s) into the SPK/MIC jacks.
- (3) Place the ear bud into your ear, and adjust the Microphone into your desired position.

4. Using a Headset

You can use a headset (#480 5R) for more private communications. To use a headset, lift the rubber cover from over the headset jack, and then plug in the headset.

Important: Your radio is not submersible or waterproof when using a headset jack. When you remove the headset, be sure to fully press the jack cover into place to restore its waterproof capability.

Charging the Battery

1. Charging the Radio

Two radios can be charged directly by using the supplied charging cradle. A single radio can charge using the Type-C USB port to connect to a USB power source. For fastest charging, turn off the radio before charging.

Warning!

To avoid the risk of personal injury or property damage from fire or electrical shock, only use the accessories specifically designated for this product. Using the Type-C USB Port

- (1) Connect the included AC adapter with Type-c USB connector cable to the radio's Type-C USB port. Connect the other end to an outlet that provides USB charging power (NOT to a USB hub).
- (2) Charge the batteries for 6 hours until the battery indicator either stops flashing.

2. Using the Charging Cradle

- (1) Connect the included AC adapter with USB connector cable to the charging cradle's Type-C USB port. Connect the other end to a standard AC wall outlet.
- (2) set the charging cradle on the desk or tabletop, and place the radio in the charging cradle with the keypad facing forward
- (3) Charge the batteries for 6 hours.

Note:

- Use only the supplied batteries, charger, and AC adapter or approved accessories
- Charge time may vary depending on the battery life remaining..
- The batteries must be installed for the unit to operate, even if the unit is also connected to external power..
- If battery power is low, you cannot operate the radio even using external power.



Allow the batteries to charge before using

***If you try to transmit while power is low, the radio will automatically turn off**



Warning: Do not charge alkaline batteries. The radio will not be used for a long time, please take out and keep the battery properly.

3.Using the Radio Battery Level and Low Battery Alertt





This radio has a **Battery Level Meter**  that shows the battery power level. The greater the number of bars visible, the stronger the battery level. When the battery level is low, the **Battery Shell**  icon will flash in the display indicating your batteries should be replaced or recharged if using a rechargeable battery pack.

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use accessories specifically designated for this product.

Basic Operations

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit



3.Using the Radio Battery Level and Low Battery Alertt

- (1) Press and hold [/CALL] to turn the radio on.
- (2) To change the volume level, press  or  to increase or decrease the volume level.
- (3) Press and hold [/CALL] to turn the radio off.

2.Choosing a Channel

Your radio has 22 channels and 155 Privacy codes you can use to talk to others, in order to speak to someone, both your radios must be set to the same channel and Privacy code.

Press the [MENU] button once, and then the ▲ or ▼ buttons to select one of the 22 FRs channels. To confirm the selection press the [PTT] button or press the [MENU] button again to move to the next feature setting.

Note: You can check the FRs channel transmission activity status through the icon. On 1–7 and 15–22 channels, it is high-power transmission and  icon is displayed. On 8–14 channels, it is low-power transmission and  icon is displayed.



3. Talking on Your Radio

To talk to others using the radio:

(1) Press and hold the [PTT] button and speak in a clear, normal voice about 2–3 inches away from the microphone. While you are transmitting, the TX→ icon appears on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the [PTT] button before you start talking.

(2) When you have finished speaking, release the [PTT] button. You can now receive incoming calls. While receiving, RX← displays.

4. Monitor Mode Feature

Your radio allows you to listen for weak signals on the current channel at the press of a key. To turn ON Monitor mode: Press and hold [ /MONI] for 2 seconds until two beeps sound. The receiver circuit stays open, and both noise and weak signals can be heard. The RX← icon blinks. To turn OFF Monitor mode: Press and hold [ /MONI] for 2 seconds to return to "Normal" mode; two beeps sound and the RX← icon stops blinking and disappears.

5.Channel Scanning

Your radio can scan all 22 channels for activity. To enter, quickly press the [SCAN] button, Repeat the same procedure to exit Your radio will rapidly scan each of the 22 channels and stop on any active channel. Your radio will resume scanning after 5 seconds when the channel is no longer active. When you press the [PTT] button to transmit on an active channel, the scanning function will stop and remain on the active channel for 10 seconds before resuming scan when [PTT] button is no longer pressed. To resume scanning, quickly press the ▲ or ▼ button.

6. Scanning Privacy Codes


Press and holding [SCAN] button to enter the Privacy Codes scanning.

A flashing "CTC/DCS" will be in the left status display to indicate the radio is in Privacy Codes scanning mode.

In this mode, the lower display will cycle through the Privacy codes as they are being tested. Once the bits of the received Privacy code are determined, the "CTC/DCS" indicator will stop flashing.


Press the [PTT] button to save the scanned tone into memory.


7.Using the Flashlight

You can use this radio in an emergency. If you press  button, the radio turns on the high-intensity LED flashlight on your radio.

Your radio operates normally when the SOS strobe is activated



(1) Press  button once, it will turn on continuously. (Always On mode)


(2) And then, press  button once, the Strobe Light emits the sOs signal. (Strobe sOs mode)

(3) And then, press  button once, the light will be turned off.

8. Emergency Alert

The Emergency Alert feature can be used to signal members in your group for help.



To activate the Emergency Alert function, press and hold the  button for 3 seconds, The Emergency Alert () icon will appear on the display, the radio will send out a loud siren sound and the flashlight will flash.


To deactivate the Emergency Alert function press and hold the  button again for 3 seconds.

WARNING: The Emergency Alert feature should only be used in the even of an actual emergency.


10.Using the Weather Radio/Scan Weather Channel

Your radio has a NOAA Weather Radio function, to enable the user to receive weather reports from designated NOAA stations. Your radio also has a NOAA Weather Scan function, to enable the user to scan all 12 channels of the NOAA WeatherRadio. While using the Weather Radio, you are not able to receive FRS communications.

(1) To turn the NOAA Weather Scan on, press and hold the [ MONI] button for 5 seconds while in FRS mode,  icon appears. The radio will go to Weather band mode and start scanning all 12 channels and stop on any active channel. When the channel becomes inactive for 10 seconds the radio will resume scanning.

(2) To Stop the NOAA WEATHER (WX) SCAN and set the channel manually on the Weather band, press the **[SCAN]** button during NOAA weather scan. The radio will stop scanning and the display will show the current Weather band channel setting and the  icon.


(3) While in Weather band mode, press the MENU button, then press the **▲** or **▼** button to increase or decrease the number to the desired weather channel, and press the MENU button to confirm to select one of the 12 NOAA weather band channels.

(4) To exit the Weather Radio broadcast mode, press and hold **[ MONI]** button.

–  icon disappears

Working the MENU System

FRS Menu List

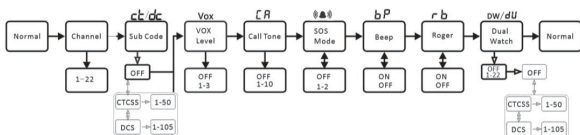

1. Privacy Codes

Your Radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch system) provides 50 privacy codes and DCS (Digitally Coded squelch) provides 105 privacy codes. This provides a total of 155 Privacy Codes. Either system can be used on all channels, but both systems cannot be used on the same channel at the same time.

To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.

To select a Privacy Code for the current channel press the **[MENU]** button twice, and then the **▲** or **▼** buttons to select between “OF/CT/DC”. Press the **[MENU]** button again and **▲** or **▼** buttons to select one of the 50 CTCSS Codes or one of the 105 DCS Codes. The Privacy Code icon on the display will indicate whether you set your Privacy Code in CTCSS or DCS mode. To confirm the selection, press the **[PTT]** button or press the **[MENU]** button again to move to the next feature setting.

NOTE: If you select a CTCSS Privacy Code, any pre-selected DCS Privacy Code will be cancelled and vice-versa. Selecting a Privacy Code of “oF” will disable the Privacy feature. To communicate between two radios, all radios in your group must be set to the same channel and/or Privacy Code selections. The Privacy Code can only be set in channels 1-22.

2. VOX (Hands-Free Transmission)

Your radio has 3 VOX level settings: (oF/1/2/3).

To set VoX, press the [MENU] button until the display shows "vox" blinking while on the right of the CHANNELNUMBER display, an "oF" icon appears. Select "1", "2" or "3" by pressing the ▲ or ▼ buttons and push the [PTT] key or press the [MENU] button again to move to the next feature setting.

VOX will be more sensitive on the "1" setting than on the "3" setting. To turn VOX of, press the [MENU] button until the display shows "VOX" blinking while on the right of the CHANNELNUMBER display, a "1", "2" or "3" icon appears. Select "oF" by pressing the ▲ or ▼ buttons and push the [PTT] key, or press the [MENU] button again to move to the next feature setting.



3. Ten Call Tone Settings

Your radio has 10 selectable CALLALERTS.

To select, press the [MENU] button until a "cA" icon appears and to the right of the "cA" icon the current CALLALERT settings is displayed. Then press the ▲ or ▼ buttons to make the CALLALERT selections – the radio will emit a corresponding tone for each selection. To confirm, press the [PTT] button or press the [MENU] button to move to the next feature setting.

4. Emergency Alert Model

This function can set the off alert/ site alert/ tone alert of the radio. Keep pressed the [LAPM] button for 3 seconds to start the alarm tone.

To select, press the [MENU] button until a  icon appears and to the right of the  icon the current Emergency Alert Model setting is displayed. Then press the ▲ or ▼ buttons to make the Emergency Alert Model selections. To confirm, press the [PTT] button or press the [MENU] button to move to the next feature setting.

NOTE: The following three options can be selected:

- OFF: means to close the alarm function;
- 1. Means local alarm, sounds alarm through your radio speaker only
- 2. Means broadcast alarm, transmits a cycling tone over-the air.

5. Keypad Silent Operation

Your radio has a keypad silent operation mode. In this mode, all "keypad beeps" and "tones" are disabled. To set the keypad silent operation, press the [MENU] button until the display shows a "bp" icon. Select "on" or "oF" by pressing the ▲ or ▼ buttons and push the [PTT] key or [MENU] button.

6. Roger Beep (end of transmission)TONE

When the [PTT] button is released, the radio will beep to confirm to other users that your transmission has finished, To turn the ROGER BEEP tone on, press the [MENU] button until the display shows a "rb" icon while on the right of the "rb" display an "of" icon appears. Select "on" by pressing the ▲ or ▼ buttons and push the [PTT] key, or press the [MENU] button to move to the next feature setting. To turn the ROGER BEEP tone off, press the [MENU] button until the display shows a "rb" icon while on the right of the "rb" display, an "on" icon appears. Select "of" by pressing the ▲ or ▼ buttons and push the [PTT] key, or press the [MENU] button to move to the next feature setting.

7. Dual Watch Function

Your radio has a DUAL WATCH function, to enable user to scan 2 channels for any activity. The first channel will be the current channel setting and the second channel will be the selected channel on the [MENU]. To turn the DUAL WATCH on press the [MENU] button until the "of" icon appears blinking on the left of the display, while the "du" icon appears on the left. Select the second channel by pressing the ▲ or ▼ button. Press the [MENU] button again and the ▲ or ▼ buttons to choose the Privacy Code (of/dc/ct). Then press the [MENU] button again and the ▲ or ▼ buttons to set the Privacy Code. Please note that the Privacy Code can be set only on ch 1~22. To confirm, press the [PTT] button or the [MENU] button. The DW icon appears, the current channel and the watch channel flash alternately, indicating that the DUAL WATCH function is turned on, and the radio will start scanning the currently used channel/code and watch channel/code, and stop on any active channel. Your radio will resume scanning after 4 seconds when the channel is no longer active. When you press the [PTT] button to transmit on an active channel, the scanning function will stop and remain on the active channel for 10 seconds before resuming scan when the [PTT] button is no longer pressed. To turn the DUAL WATCH function off, press the [SCAN] button.

Appendix A.—Technical Specifications

Channels	22 FRS/12 Weather	RF Output Power	2W (FRS)
Sub-Codes	50 CTCSS Tones/ 105 DCS Codes	FM Modulation	11K0F3E@12.5KHz
Frequency Range	FRS	Adjacent Channel Power	60dB @ 12.5KHz
Operation Voltage	DC 3.7 V ±10%	Transmission current	≤1000mA

NOTE: All specifications may be modified without prior notice or liability.

Appendix B. – Trouble shooting guide

Phenomena	Analysis	Solution
You cannot turn on the radio.	The battery may be installed improperly.	Remove and reattach the battery.
	The battery power may run out.	Recharge or replace the battery.
	The battery may suffer from poor contact caused by dirty or damaged battery contacts.	Clean the battery contacts or replace the battery.
During receiving, the voice is weak or intermittent.	The battery voltage maybe low.	Recharge or replace the battery.
	The volume level may be low.	Increase the volume.
	The antenna maybe loose or maybe installed incorrectly.	Turnoff the radio, and then remove and reattach the antenna.
You cannot communicate with other group members.	The speaker maybe blocked.	Clean the surface of the speaker.
	The frequency or signaling type maybe inconsistent with that of other members.	Verify that your TX/RX frequency and signaling type are correct.
	You may be too far away from other members.	Move towards other members.
You hear unknown voices or noise.	You may be interrupted by radios using the same frequency.	Change the frequency, or adjust the squelch level.
	The radio in analog mode maybe set with no signaling.	Request your dealer to set signaling for the current channel to avoid interference
You are unable to hear anyone because of too much noise and hiss.	You may be too far away from other members.	Move towards other members.
	You may be in an unfavorable position. For example, your communication may be blocked by high buildings or blocked in an underground area.	Move to an open and flat area, restart the radio, and try again.
	It may be the result of external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.
The radio keeps transmitting.	VOX may be turned on or the headset is not installed in place	Turn off the VOX function. Check that the headphones are in place.

NOTE: If the above solutions cannot fix your problems, or you may have some other queries, please contact your dealer for more technical support.

Appendix C. –FRS Frequency Chart (MHz)

CH.No	CH.Freq.	RF Power	CH.No	CH.Freq.	RF Power
1	462.5625	High	12	467.6625	Low
2	462.5875	High	13	467.6875	Low
3	462.6125	High	14	467.7125	Low
4	462.6375	High	15	462.5500	High
5	462.6625	High	16	462.5750	High
6	462.6875	High	17	462.6000	High
7	462.7125	High	18	462.6250	High
8	467.5625	Low	19	462.6500	High
9	467.5875	Low	20	462.6750	High
10	467.6125	Low	21	462.7000	High
11	467.6375	Low	22	462.7250	High

Appendix D. - NOAA Weather Radio Frequency List (US, CAN, AND INTL)

Channel No.	RX Freq.(MHz)	Channel No.	RX Freq.(MHz)
1	162.5500	7	162.5250
2	162.4000	8	161.6500
3	162.4750	9	161.7750
4	162.4250	10	161.7500
5	162.4500	11	162.000
6	162.5000	12	163.275

IMPORTANT NOTICE



WARNINGS: Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by PO FUNG COMPANY may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of type acceptance requirements of part 2 of the rules. Your radio is set up to transmit a regulated signal on an assigned frequency. Any adjustment to your radio must be made by qualified technicians. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.



FCC & RSS WARNINGS:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale to the public, it must be tested and certified to the FCC/ISED that it does not exceed the exposure limit established by the FCC/ISED. Tests for each product are performed in positions and locations as required by the FCC/ISED. For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal. To maintain compliance with the FCC/ISED's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face. This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment, in order to comply with the FCC/ISED RF exposure requirements, the antenna installation must comply with the following: Users must be fully aware of the hazards of the exposure and able to exercise control over their RF exposure to qualify for the higher exposure limits.

Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) Button is pressed.

The device is authorized to operate at a duty factor not to exceed 50%.

This device complies with ISERC licence-exempt RSS standard (s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED licenciables aux appareils radio exempts de licence

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

ISED exposition aux radiations

Cet équipement est conforme avec ISED les limites d'exposition aux rayonnements définies pour un environnement contrôlé.

Cet émetteur ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou émetteur.

Cet équipement doit être installé et utilisé avec un minimum de 2.5cm de distance entre le radiateur et votre corps

Electromagnetic interference/Compatibility

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (CFC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Precautions for Portable Terminals

■ Operating Prohibitions

To protect you against any property loss, bodily injury or even death, be sure to observe the following safety instructions:

1. Do not operate the product in a location containing fuels, chemicals, explosive atmospheres and other flammable or explosive materials. In such location, only an approved Ex-protection model is allowed for use, but any attempt to assemble or disassemble it is strictly prohibited.
2. Do not operate the product near or in any blasting area.
3. Do not operate the product near any medical or electronic equipment that is vulnerable to RF signals.
4. Do not hold the product while driving.
5. Do not operate the product in any area where use of wireless communication equipment is completely prohibited.

■ Important Tips

To help you make better use of the product, be sure to observe the following instructions:

1. Do not use any unauthorized or damaged accessory.
2. Keep the product at least 2.5 centimeters away from your body during transmission.
3. Do not keep the product receiving at high volume for a long time.
4. For vehicles with an air bag, do not place the product in the area over the air bag or in the air bag deployment area.
5. Keep the product and its accessories out of reach of children and pets.
6. Please operate the product within the specified temperature range.
7. Continuous transmission for a long time may lead to heat accumulation within the product. In this case, please keep it at a proper location for cooling.
8. Handle the product with care.
9. Do not disassemble, modify or repair the product and its accessories without authorization.

■ Hazardous Environments

Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio Off to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Precautions for Batteries

■ Hazardous Environments

To protect you against any property loss, bodily injury or even death, be sure to observe the following safety instructions:

1. Do not charge or replace your battery in a location containing fuels, chemicals, explosive atmospheres and other flammable or explosive materials.

flammable or explosive materials.

2. Do not charge your battery that is wet. Please dry it with a soft and clean cloth prior to charge
3. Do not charge your battery suffering deformation, leakage and overheat.
4. Do not charge your battery with an unauthorized charger.
5. Do not charge your battery in a location where strong radiation is present.
6. Overcharge shall always be prohibited for it may shorten the life of your battery.

■Maintenanceinstructions

To help your battery work normally or prolong its life, be sure to observe the following instructions:

1. Accumulated dust on charging connector may affect normal charging. Please use a clean and dry cloth to wipe it on aregular basis.
2. It is recommended to charge the battery under 5°C~40°C, Violation of the said limit may cause battery life reduction or2even battery leakage.
3. To charge a battery attached to the product, turn it off to ensure a full charge.
4. Do not remove the battery or unplug the power cord during charging to ensure a smooth charging process.
5. Do not dispose of the battery in fire.
6. Do not expose the battery to direct sunlight for a long time nor place it close to other heating sources
7. Do not squeeze and penetrate the battery, nor remove its housing.

■Transportation instructions

1. Damaged batteries must not be transported.
2. To avoid short circuit, separate the battery from metal pars or from each other if two or more batteries are transported in one packaging.
3. The radio must be switched off and secured against switch-on, if the battery is attached.

The content of the shipment must be declared in the shipping documents and by a Battery Shipping Label on the packaging.Contact your hauler for the local regulations and further information.

■Precautions for Disposal

Once the service life of our products (including but not limited to radios and batteries) has ended, they shall not be disposed as household garbage. Their recycling and disposal shall satisfy your local regulations.

Disclaimer

The Company endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technological development. No part of this manual may be copied, modified, translated, or distributed in any manner without the prior written consent of the Company.

We do not guarantee, for any particular purpose, the accuracy, validity, timeliness, legitimacy or completeness of the third-party products and contents involved in this manual.